

# SPRING COMMISSIONING CHECKLIST

---

## Before You Launch:

- Check the condition of antifouling paint and [repaint](#) if necessary.
- Inspect all [hose clamps](#) for rust, and replace as necessary. Double clamp fuel lines, exhaust hoses, and, if possible, any hoses below the waterline with marine-rated stainless hose clamps. With the exception of scupper or deck drains, keep seacocks closed when you are away from the boat.
- Inspect all [hoses](#) for stiffness, rot, leaks, and cracking and replace any that are faulty. Make sure they fit snugly.
- [Inspect prop\(s\)](#) for dings, pitting, and distortion. Make sure cotter pins are secure.
- Grip the prop (on inboard drive systems) and try moving the shaft up and down and side to side – if it's loose and can be wiggled, the cutless bearing may need to be replaced.
- Check the rudderstock to ensure it hasn't been bent. Operate the wheel or tiller to ensure the steering works correctly. Check the rudder bearing for unusual play or movement.
- Inspect the hull for blisters, distortions, and stress cracks.
- [Inspect and lubricate seacocks](#). Make sure strainers are clean.
- Make sure your [engine intake sea strainer](#) is not cracked or bent from ice, free of corrosion, and is clean and properly secured.
- With inboards, check the engine shaft and rudder [stuffing boxes](#) for correct adjustment. A stuffing box should leak no more than two or three drops each minute when the prop shaft is turning. Check the shaft log hose for deterioration and rusty hose clamps.
- Use a garden hose to check for deck leaks at ports and hatches. Renew caulk or [gaskets](#) as necessary.
- [Inspect bilge pump](#) and [float switch](#) to make sure they're working properly. Check pump hose.
- Check stove and remote [LPG tanks](#) for loose fittings, leaking hoses, and properly functioning safety shutoff systems. Use the pressure gauge to conduct a leak down test to check for system leaks.
- Inspect dock and anchor lines for [chafe and wear](#).
- If equipped, ensure that the stern drain plug is installed.
- After the boat is launched, check all thru-hulls for leaks.

---

## Engines and Fuel Systems:

- Inspect fuel lines, including fuel tank fill and vent hoses, for softness, brittleness, or cracking. Check all joints for leaks, and make sure all lines are well supported with noncombustible clips or straps with smooth edges.
- Inspect fuel tanks, fuel pumps, and filters for leaks. Ensure portable tanks and lines are completely drained of stale fuel before filling with fresh fuel. Clean or [replace fuel filters](#).
- Every few years, remove and [inspect exhaust manifolds and risers](#) for corrosion (for inboard powered boats.)
- [Charge battery](#). Clean and tighten electrical connections, especially both ends of battery cables. Wire-brush battery terminals and fill cells with distilled water (if applicable).
- Inspect bilge ventilation intake and blower ducting for damage or leaks and run blower to confirm correct operation.
- Test engine warnings and alarms.

---

## Engine Outdrives and Outboards:

- [Inspect rubber outdrive bellows](#) for cracked, dried, and/or deteriorated spots (look especially in the folds) and replace if suspect.
- Check [power steering](#) and power trim oil levels.
- [Replace anodes](#) that are more than half wasted away.
- Inspect outer jacket of [control cables](#). Cracks or swelling indicate corrosion and mean that the cable must be replaced.
- Inspect [lower unit oil](#) level in sterndrives and outboards and top off as necessary.



# SPRING COMMISSIONING CHECKLIST

---

## Sailboat Rigging:

- Inspect swage fittings for cracks and heavy rust (some discoloration is acceptable). Inspect wire halyards and running backstays for “fishhooks” and rust.
- Remove tape on turnbuckles and lubricate threads, preferably with Teflon. Replace old tape with fresh tape, and ensure that water is able to freely drain from it.
- If you suspect the core around a chainplate is damp, remove the chainplate to inspect and make repairs.

## Trailers:

- [Inspect tire treads and sidewalls](#) for cracks or lack of tread and replace as necessary. Check air pressure – don’t forget the spare.
- Inspect wheel bearings and [repack with grease](#) as necessary.
- [Test all lights](#); replace any broken bulbs or lenses.
- Inspect winch to make sure it’s working properly. Inspect hitch chains.
- Inspect trailer frame and axel(s) for rust. Sand and paint to prevent further deterioration.
- [Inspect brakes](#) and brake fluid reservoir.

## Safety:

- Check expiration dates on flares.
- Inspect fire extinguishers. Replace if over 12 years from date of manufacture. [Over 40 million Kidde extinguishers with plastic handles were recalled on Nov. 2, 2017.](#)
- Make sure you have properly sized and wearable [life jackets](#) in good condition for each passenger, including kids. Check inflatable life jacket cylinders.
- Test smoke, carbon monoxide (CO), fume, and bilge [alarms](#).
- Check running lights and spare bulb inventory.
- Update paper charts and [chartplotter software](#).
- Replenish [first-aid kit](#) items that may have been used last season or have outdated supplies.
- Check the operation of VHF radio(s) and that the MMSI number is [correctly programmed](#) in. Visit [BoatUS.com/MMSI](#) to request an MMSI number, a free service for BoatUS Members.
- Get a free vessel safety check from the U.S. Coast Guard Auxiliary or U.S. Power Squadrons. Learn more at [cgaux.org/vsc](#).

## For the Dock:

- Check both ends of the shore power cable connections for burns, which indicate the cable and/or boat’s shore power inlet or the dock’s receptacle must be replaced.
- Test ground-fault protection on your boat and dock, and visit [BoatUS.com](#) to learn how to [prevent Electric Shock Drowning](#).

## The Paperwork:

- Make sure your boat registration or [documentation](#) is up to date. Don’t forget your trailer tags.
- Review your boat insurance policy and update coverage if needed. BoatUS provides free quotes at [BoatUS.com/Insurance](#). Provide a copy to your marina or club.
- Ensure your BoatUS Membership is in good standing. Login to [BoatUS.com/Account](#) to check your Membership status or join at [BoatUS.com/Membership](#).